

SMARTSET APP DOWNLOAD FOR FREESTYLE PRO

IMPORTANT NOTES:

The App will not run from your computer.

It must be saved to the top-level of the v-Drive ON THE KEYBOARD.

Non-US users: The App requires that your computer is running the US keyboard driver.

Pre-installed Windows & Mac Versions

Your Freestyle Pro is pre-loaded with both the Windows & Mac versions of the SmartSet App. Simply open the v-Drive to launch it.

Use this download only if you need to re-install the App on the v-Drive or want to access the latest version with several bug fixes.

Linux

Many Linux users have reported successfully using Wine to run the Windows version of the App.

Note: Wine and other such programs are 3rd party applications which have not been tested by Kinesis and are not supported, use at your own risk.

INSTALLATION INSTRUCTIONS

Step 1) Use the links below to download the latest version of the SmartSet App for Windows or Mac to your computer.

Step 2) Locate the downloaded App on your computer and unzip if necessary.

Step 3) MAC USERS ONLY- Double-click the App to perform a quick verification. Click the Open button and then close the App. View [Example](#) .

Step 4) Open the v-Drive (SmartSet + F8) and locate the "FS Pro" removable drive in your file manager program.

Step 4) Copy and paste the App to top level of the v-Drive. Then double-click the App to run it.

MAC TROUBLESHOOTING: If you receive an error message saying that the App has been "damaged", make sure you verified the App from your Mac before copying it to the v-Drive (step 3 above).